

## LED Lighting for Machine Vision



## Catalog 2014/2015



## LED lighting for machine vision

### About LATAB

LAT elektronik AB (**L**ED **A**rray **T**echnology) was founded in 1988 in Stockholm, Sweden. Starting as a consultancy for image processing technology, the company soon became a specialist for customer-specific lighting solutions in the area of machine vision. As part of the German Polytec Organization ([www.polytec.com](http://www.polytec.com)), LATAB today offers an outstanding variety of standard products and is known for its high degree of flexibility and short delivery times, even for customer-specific developments.

### Why choose LATAB products?

- All products are "Made in Sweden" and satisfy the highest quality demands
- Individual requirements are largely met by the modularity of the standard program
- All lights are available in continuous and strobe modes
- Lights and controllers are easy and user-friendly to operate
- Very flexible solutions
- Very short delivery times
- Application-orientated advice and long-term service

### Support

Integration into the international Polytec Organization guarantees world-wide support for LATAB products. Experienced engineers from the machine vision industry help customers make the best choice of products and if required provide support in the integration of machine vision systems.

### Customer-specific engineering

Customer-specific developments and adaptations are a core part of LATAB's business – at near standard prices of course, and with short project lead times. You name it, we'll make it!

Design skills:

- CAD engineering
- Electronics development
- Thermal management

### Evaluation kits

Different environmental conditions for machine vision applications can often make the choice of suitable lighting difficult. That's why in many cases "Try before you buy" is the way to go.

LATAB provides demonstration units of potentially suitable lighting heads and controllers to help the customer decide on the best lighting for his practical situation. Try it out!

### Warranty

A warranty period of one year applies to all light heads and controllers under the following operating conditions:

Operating temperature:  
+5 °C to +40 °C (41 °F to +104 °F)

Storage temperature:  
-40 °C to +90 °C (-40 °F to +194 °F)

Relative humidity:  
max. 80%, non-condensing

Geographical height of operating location:  
up to 2000 m above sea level

Pollution degree:  
2, only non-conductive pollution occurs. Except that occasionally a temporary conductivity caused by condensation is to be expected.

Definition of a defect light head:  
A light head is defect if the brightness decreases to 50% of the original luminosity.

Restriction of Warranty:  
Operation without LATAB controller causes a loss of warranty!

### Changes

We reserve the right to make changes to products without notification.







## Contents



Content	Page	Content	Page
LED lighting for machine vision	2	Control units	24
About LATAB		General information	
Why choose LATAB products?		Continuous mode	
Support		Strobe mode	
Customer-specific engineering		Ethernet interface	
Evaluation kits		RS-232 interface	
Warranty		Stand alone operation	
Changes		Test program	
Contents	3	Controller selection	25
Lighting techniques	4	Continuous mode controllers	26
Adjustable light beam angles	5	Strobe mode controllers	27
LED lighting heads	6	Controller figures	28
General features		Demo controller/laboratory tester	31
A wide product range		Inline Controller	
Lighting head series		Demo/laboratory lighting kit	32
Guideline for longer lifetime of LED lighting heads		Order options	33
Ring lights with lens thread	7	Cable options for lighting heads	
Ring lights	8	Extension cables for lighting heads	
Ring lights with 50° light beam angle	9	Diffuser	
Dark field lights	10	Order information	
Dome lights	11	Polarization filters	
Tunnel lights	12	Custom light beam angle	
Line lights - single line	13	Lighting head brackets	
Line lights - two lines	14	DIN clips for controllers	
Line lights - square lines	15	Lighting head brackets	34
Line lights with fresnel lens	16	Polarization filters for ring lights	35
Front/back lights	17	Customer-specific engineering	36
Front lights 80 x 56 mm	18	General LED lighting	
Coaxial lights	19		
Spot lights 7 mm	20		
Spot lights 16 mm			
High brightness spot lights	21		
High brightness ring lights	22		
High brightness rectangular lights	23		



## Lighting techniques

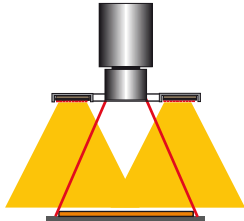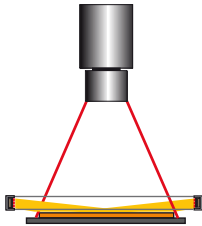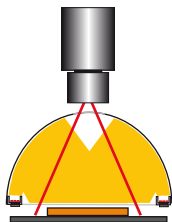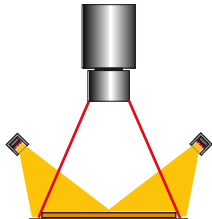Illumination	Application	Figure
<b>Ring light</b> <ul style="list-style-type: none"> <li>• Illuminate flat, diffused surfaces</li> <li>• Inspection of circular objects</li> <li>• When direct attachment to lens is required</li> <li>• Standard sizes: 44 to 345 mm outer diameter</li> <li>• Optional: diffusers and polarization filters</li> </ul>	<ul style="list-style-type: none"> <li>• Homogeneous/directed lighting</li> <li>• Defects on surfaces</li> <li>• OCR</li> <li>• Print control</li> <li>• Inspection of assembly</li> <li>• Part recognition</li> </ul>	
<b>Dark field light</b> <ul style="list-style-type: none"> <li>• Creates low angle light and enhances contrast of surface features</li> <li>• Standard sizes: 25 to 276 mm outer diameter</li> <li>• Small working distance</li> </ul>	<ul style="list-style-type: none"> <li>• Detection of edges, defects and contours</li> </ul>	
<b>Dome light/tunnel light</b> <ul style="list-style-type: none"> <li>• Diffused ("cloudy day") and shadow-free lighting</li> <li>• Standard sizes dome: 44 to 345 mm outer diameter</li> <li>• Standard sizes tunnel: 119 to 371 mm length</li> <li>• Small working distance</li> </ul>	<ul style="list-style-type: none"> <li>• Inspection of specular and diffuse objects</li> <li>• OCR</li> <li>• Print control</li> <li>• Label inspection</li> </ul>	
<b>Line light</b> <ul style="list-style-type: none"> <li>• Can also be used as a dark field light to create low angle light</li> <li>• Standard length: 50 to 446 mm</li> <li>• Optional: diffusers</li> <li>• One, two or square lines are available</li> </ul>	<ul style="list-style-type: none"> <li>• Homogeneous/directed lighting</li> <li>• Defects on surfaces</li> <li>• OCR</li> <li>• Print control</li> <li>• Inspection</li> </ul>	

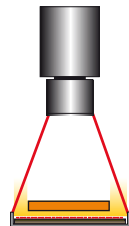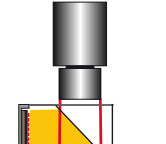

Illumination	Application	Figure
<b>Back light</b> <ul style="list-style-type: none"> <li>• To highlight the contour of a flat object</li> <li>• For opaque and transparent objects</li> <li>• Ideal for precise measurements</li> <li>• Standard sizes: 51 x 48 to 207 x 516 mm</li> </ul>	<ul style="list-style-type: none"> <li>• Measure outside dimension of objects</li> <li>• Locate parts or mounting holes</li> <li>• Positioned under the object</li> <li>• Homogeneous lighting</li> </ul>	
<b>Coaxial light</b> <ul style="list-style-type: none"> <li>• Diffused and shadow-free lighting</li> <li>• Creates contrast between specular and diffuse surfaces</li> <li>• Short working distance</li> </ul>	<ul style="list-style-type: none"> <li>• For reflecting objects</li> <li>• Print control</li> </ul>	

## Adjustable light beam angles


The ring lights and dark field lights manufactured by LATAB always have a diffuser in order to make the light beam even and homogeneous.

This gives the opportunity to change the light beam angle after the customers needs by adjusting the angle of the diffuser.

So individual beam angles can be taken into account on request.


### Ring lights

The standard angle is 12°. Custom adjustments from 0° to 40° on request.

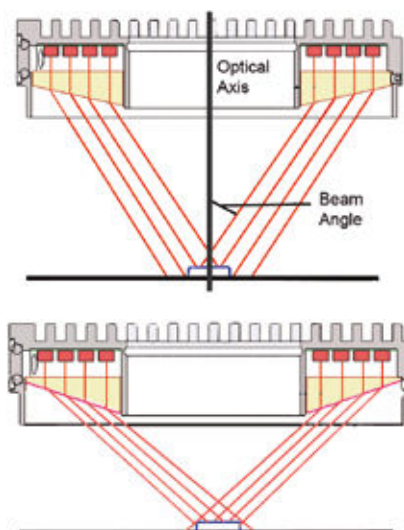

### Dark field lights

The standard angle is 80° (optical axis). Custom adjustments from 70° to 90° on request.

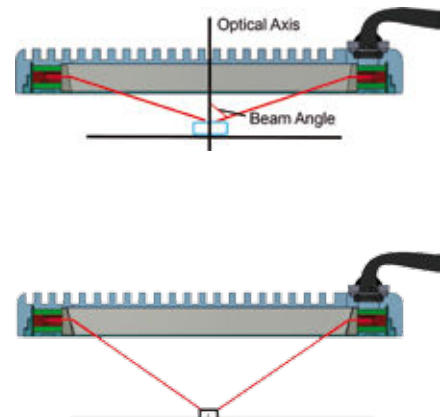





## LED lighting heads

### General features

LATAB LED lightings are devices that can be used for a great variety of vision and industrial applications, e.g. inspection, testing and robot control.

The LED lighting heads feature a superior light intensity and smooth lighting combined with long lifetime.

The LATAB product family is highly modular and can be used in various combinations to optimize the illumination.

All modules, light heads and controllers are made for industrial applications. For this reason they are built in solid aluminium housings.

Any type can be used either for continuous or strobe mode.

The lights are robust, small in size and easy to install. Just connect the light head to a controller and the light intensity will be at 100% by default.

### A wide product range

The modular design of LATAB LED lighting heads permits a range of more than 3,000 standard products.

Besides the design of the lighting head, the key selection criteria are continuous or strobe mode lighting, different LED colors and innumerable sizes, mounts and cable-configurations.

Accessories such as polarizing filters and brackets also form part of the product range.

The standard lighting heads are based upon high intensive LEDs, available in a wide range of types and sizes:

Ring-, dome-, tunnel-, front-, back-, spot-, line-, dark field-, coaxial-, rectangular and custom designed lighting heads.

They are available in different colors, RGB (red/green/blue) as well as IR and UV.

The standard colors are:

- White
- Red (617 nm)
- Infrared (880 nm)
- Blue (465 nm)
- Green (520 nm)
- RGB (red/green/blue)
- Ultraviolet (395 nm)

### Lighting head series

Today LATAB applies high intensive SMD type LEDs (surface mounted device). Lighting heads based on these LED type are named S-series ("S" as first character in the product code).

The well-established H-series lighting heads are based upon the classic hole mounted leds ("P" as first character in the product code). They were standard before the introduction of SMD type LEDs. The H-series is not listed in the catalog any more. These lighting heads are still available on request. The customer's investment protection is a key point in the long lasting partnership with LATAB customers.

### Guideline for longer lifetime of LED lighting heads

LEDs are long-life components; however the effect of heating will decrease their lifetime. To increase the lifetime, please keep the following in mind when choosing LED lighting:

- Red LEDs feature the longest lifetime
- Adjust light intensity to lowest usable level
- Keep ambient temperature low
- Controller mode for longer lifetime in this order:
  1. Strobe mode (strobe controller)
  2. Long flash mode (continuous mode controller)
  3. Continuous mode (continuous mode controller)



## Ring lights with lens thread


This ring light can be easily mounted in two ways:

- By a small bracket (order no. LAD3 7218)
- By a standard lens adapter with a lens thread of 37 x 0.75 mm. Various threads are available to fit different lenses

The best evenness of light will be achieved at a working distance of 20-25 mm. A diffuser is included.



### Mechanical dimensions

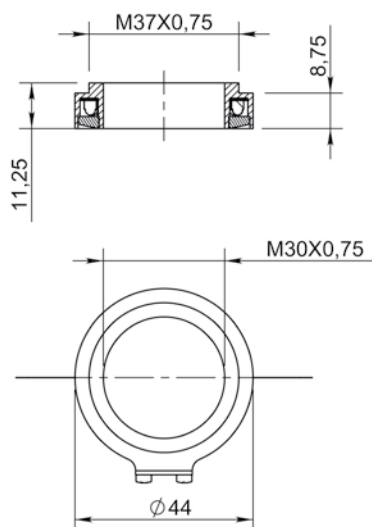

Step files available on request

### Order information

Order number	Sizes (mm)		Working distance (mm)	Controller <sup>1)</sup>	
	outer Ø	inner Ø		steady mode	strobe mode
SAX3 1044	44	29	20-25	1 A	8 A

<sup>1)</sup> See controller selection for details


### Color information

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>2)</sup> Example for red ring light: SAH3 1044

### Options

- Cable length and type see "Order options"
- Lens adapters for different lens threads on request
- Bracket LAD3 7218:

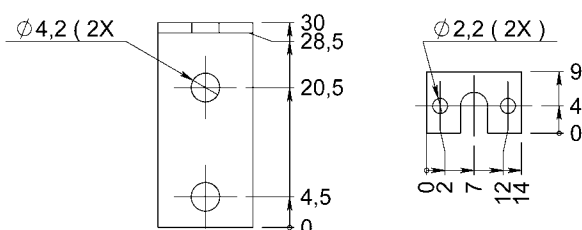



## Ring lights

Ring lights provide a uniform and shadow-free lighting. A diffuser (removable) for homogeneous light is included.


In order to avoid reflection, some ring lights can be used in combination with polarization filters.

Brackets are included (no. SXX3 010213, for details see lighting head brackets).

The standard light beam angle is 12°. Custom adjustment from 0° to 40° on request.

The special RGB lights are built with high-power three-chips LEDs red, green, and blue, enabling the use of each color separately or in combination. White light can be achieved by setting each channel to the same intensity level.

### Mechanical dimensions

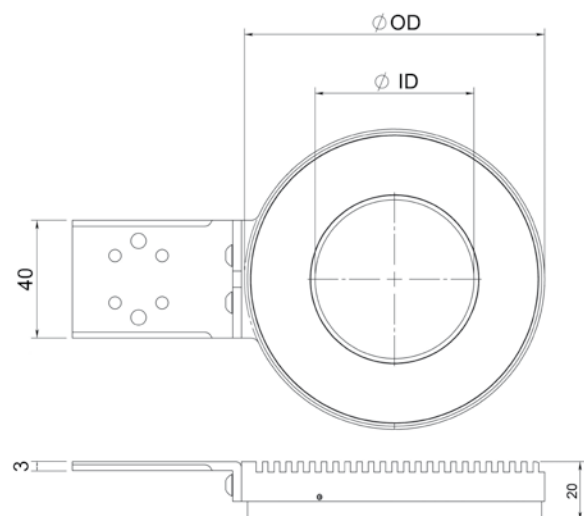

Step files available on request

### Color information

Replace "X" in order number by one character <sup>1)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>1)</sup> Example for red ring light: SAH3 1078



### Order information single color lights

Order number	Sizes (mm)		Working distance (mm)	Controller <sup>2)</sup>	
	outer Ø	inner Ø		steady mode	strobe mode
SAX3 1044	see ring light with lens thread				
SAX3 1078	78	34	50	1 A	8 A
SAX3 1102	102	54	80	1 A	8 A
SAX3 1132	132	84	100	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX3 1162	162	114	140	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX3 1202 <sup>4)</sup>	202	155	180	3 A	24 A
SAX3 1348 <sup>4)</sup>	345	299	300	3 A	24 A

<sup>2)</sup> See controller selection for details

<sup>3)</sup> For light colors white, blue, green and UV

<sup>4)</sup> Second bracket (SXX3 010213) included for more stability

### Order information RGB lights

Order number	Sizes (mm)		Working distance (mm)	Controller <sup>5)</sup>	
	outer Ø	inner Ø		steady mode	strobe mode
RGB3 1078	78	34	50	1 A	8 A
RGB3 1102	102	54	80	1 A	8 A
RGB3 1132	132	84	100	1 A	8 A
RGB3 1162	162	114	140	1 A	8 A
RGB3 1202 <sup>4)</sup>	202	155	180	1 A	8 A
RGB3 1348 <sup>4)</sup>	345	299	300	on request	

<sup>5)</sup> For RGB lights 4 channel controllers are required

### Options

- Cable length and type see "Order options"
- Polarization options see "Polarization filters"





## Ring lights with 50° light beam angle


These ring lights are characterized by a 50 degree inward aligned light output which places them between conventional ring lights and dark field lights.

This kind of illumination is used for example for shadow-free lighting of conic objects.

Bracket is included (no. SXX3 010213, for details see lighting head brackets).



### Mechanical dimensions

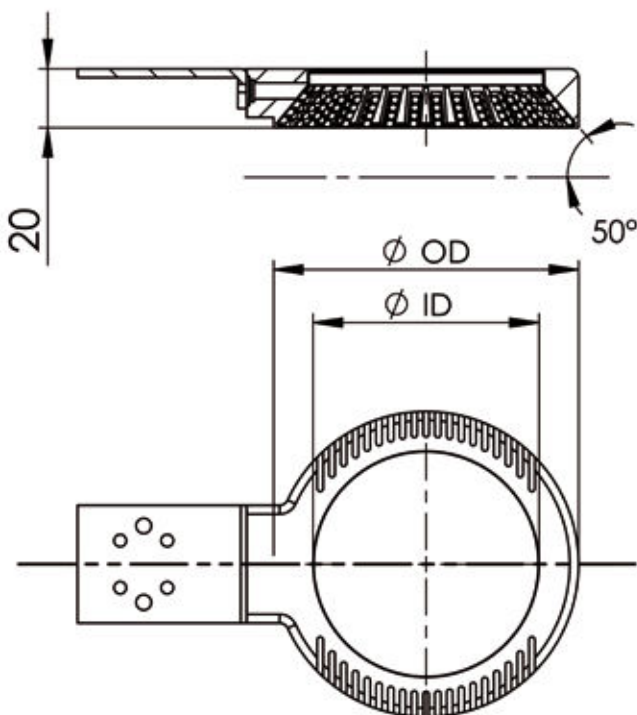

Step files available on request

### Order information

Order number	Sizes (mm)		Controller <sup>1)</sup>	
	outer Ø	inner Ø	steady mode	strobe mode
SAX3 3104	104	76	1 A	8 A
SAX3 3184	184	157	3 A	24 A

<sup>1)</sup> See controller selection for details

### Color information

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
H	Red	617 nm
W	White	

<sup>2)</sup> Example for red ring light: SAH3 3104

### Options

- Cable length and type see "Order options"




## Dark field lights

Dark field lights are ideal for detecting edges and contours.


The standard light beam angle is 80°. Customized adjustment from 70° to 90° is possible.

The dark field lights have a diffuser for evenness of illumination.

Bracket LAD3 4011 is included (for details see „Lighting head brackets“).

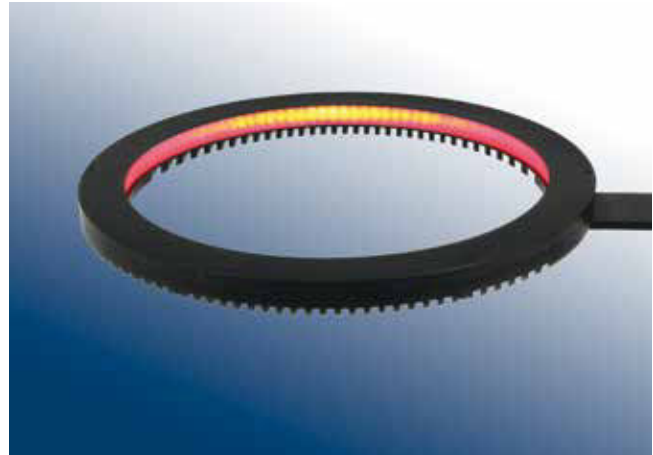

### Mechanical dimensions

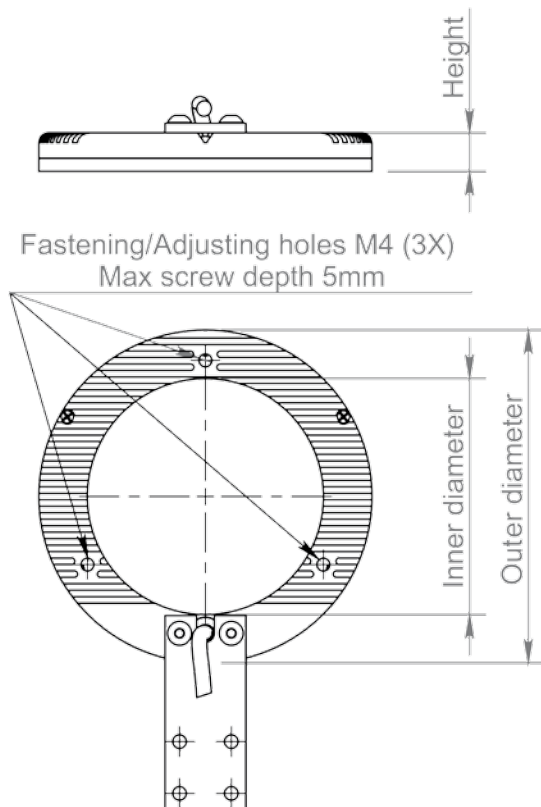

Step files available on request

### Options

- Cable length and type see "Order options"
- Custom light beam angle see "Order options"

### Order information

Order number	Sizes (mm)			Light beam angle	Controller <sup>1)</sup>	
	outer Ø	inner Ø	height		steady mode	strobe mode
PAD3 4025 <sup>2)</sup>	25	15	9.5	5°	1 A	8 A
SAX3 4072	72	42	12	10°	1 A	8 A
SAX3 4103	103	73	12	10°	1 A	8 A
SAX3 4166	166	136	12	10°	1 A	8 A
SAX3 4213	213	183	12	10°	1 A	8 A
SAX3 4276	276	246	12	10°	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>

<sup>1)</sup> See controller selection for details

<sup>2)</sup> Available only in red light color

<sup>3)</sup> For light colors white, blue, green and UV

### Color information

Replace "X" in order number by one character <sup>4)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>4)</sup> Example for red dark field light: SAH3 4072



## Dome lights


The dome lights are available in a wide range of sizes. Dome lights provide highly shadow-free lighting in small working distances and avoid reflection from reflective objects more than ring lights.

In order to prevent a camera hole shadow it is possible to use a coaxial light together with the dome light. As an option the camera hole can be covered by an adapter to reduce the hole size.

Brackets are included (no. SXX3 010213, for details see „Lighting head brackets“) except for SAX3 2044.



### Mechanical dimensions

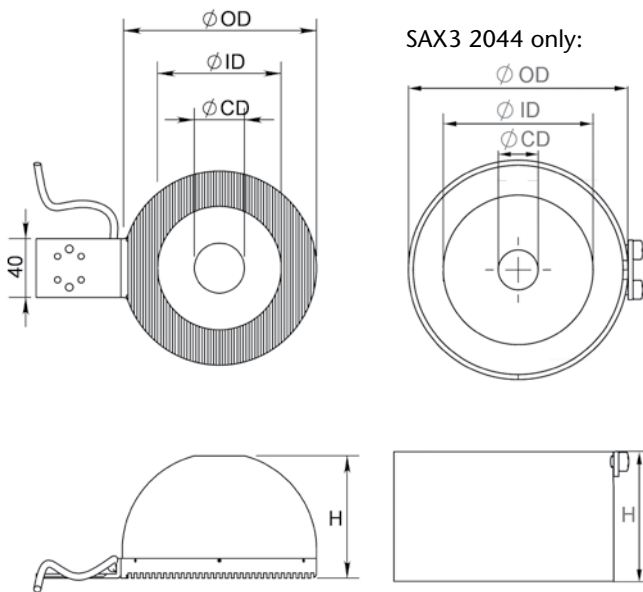

Send files available on request

### Color information

Replace "X" in order number by one character <sup>1)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>1)</sup> Example for red dome light: SAH3 2078

### Order information single color lights

Order number	Sizes (mm)				Controller <sup>2)</sup>	
	outer Ø	inner Ø	camera hole Ø	height	steady mode	strobe mode
SAX3 2044	44	30	8	26	1 A	8 A
SAX3 2078	78	34	24	57	1 A	8 A
SAX3 2102	102	54	30	69	1 A	8 A
SAX3 2132	132	84	34	83	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX3 2162	162	114	50	100	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX3 2202 <sup>4)</sup>	202	155	65	124	3 A	24 A
SAX3 2348 <sup>4)</sup>	345	299	100	190	3 A	24 A

<sup>2)</sup> See controller selection for details

<sup>3)</sup> For light colors white, blue, green and UV

<sup>4)</sup> Second bracket (SXX3 010213) included for more stability

### Order information RGB lights

Order number	Sizes (mm)				Controller <sup>5)</sup>	
	outer Ø	inner Ø	camera hole Ø	height	steady mode	strobe mode
RGB3 2078	78	34	24	57	1 A	8 A
RGB3 2102	102	54	30	69	1 A	8 A
RGB3 2132	132	84	34	83	1 A	8 A
RGB3 2162	162	114	50	100	1 A	8 A
RGB3 2202 <sup>4)</sup>	202	155	65	124	1 A	8 A
RGB3 2348 <sup>4)</sup>	345	299	100	190	on request	

<sup>5)</sup> For RGB lights 4 channel controllers are required

### Options

- Cable length and type see "Order options"
- Adapter for reduction of camera hole size on request



## Tunnel lights

Tunnel lights, like dome lights, provide shadow-free lighting and are better at avoiding reflections from objects than are ring lights.


The most even illumination will be achieved by placing the light as close to the object as possible.

In order to prevent a camera hole shadow it is possible to use a coaxial light together with the tunnel light.

Optional brackets can be mounted at either end of the tunnel.



### Mechanical dimensions

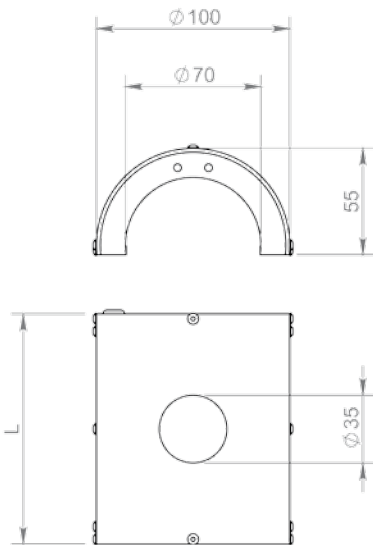

Step files available on request

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- Camera hole adapter to reduce camera hole size on request
- More camera holes on request

### Order information

Order number	Tunnel length (mm)	Controller <sup>1)</sup>	
		steady mode	strobe mode
SAX3 5203	119	1 A	8 A
SAX3 5204	155	1 A	8 A
SAX3 5205	191	1 A	8 A
SAX3 5206	227	1 A	8 A
SAX3 5207	283	1 A	8 A
SAX3 5208	299	1 A	8 A
SAX3 5209	335	1 A	8 A
SAX3 5210	371	1 A	8 A

<sup>1)</sup> See controller selection for details

### Color information

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>2)</sup> Example for red tunnel light: SAH3 5203




## Line lights - single line

Front line lights are built in modules from 50 to 446 mm.

A diffuser for evenness of illumination is available as an option.



### Mechanical dimensions

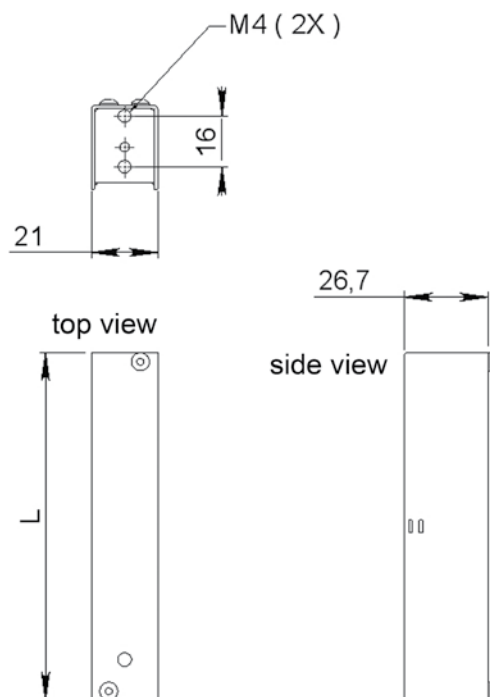

Step files available on request

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- Diffuser see "Order options"

### Order information

Order number	Length (mm)	Controller <sup>1)</sup>	
		steady mode	strobe mode
SAX4 1050	50	1 A	8 A <sup>2)</sup>
SAX4 1086	86	1 A	8 A
SAX4 1122	122	1 A	8 A <sup>2)</sup>
SAX4 1158	158	1 A	8 A
SAX4 1194	194	1 A	8 A <sup>2)</sup>
SAX4 1230	230	1 A	8 A
SAX4 1266	266	1 A	8 A <sup>2)</sup>
SAX4 1302	302	1 A	8 A
SAX4 1338	338	1 A	8 A <sup>2)</sup>
SAX4 1374	374	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX4 1410	410	1 A	8 A <sup>2)</sup>
SAX4 1446	446	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>

<sup>1)</sup> See controller selection for details

<sup>2)</sup> Strobe mode operation with light colors white, blue, green, UV on request

<sup>3)</sup> For light colors white, blue, green and UV

### Color information

Replace "X" in order number by one character <sup>4)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>4)</sup> Example for red line light: SAH4 1050





## Line lights - two lines


Two front line lights, which are based on the single line light (SAX4 1XXX), are available in modules from 50 to 446 mm.

The aluminium housing can be adjusted for width (40 to 101 mm) as well as the angle of the lights.

So a custom adaption to applications is very easy.

A diffuser for evenness of illumination is available optionally.

### Mechanical dimensions

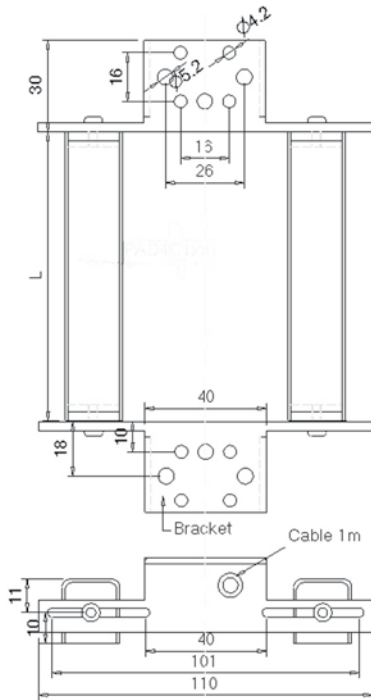

Step files available on request

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- Diffuser see "Order options"
- Different spacer width between lights:
  - 40 - 101 mm width: standard
  - 40 - 90 mm width: add "B90" to order code
  - 70 - 190 mm width: add "B190" to order code
  - 130 - 290 mm width: add "B290" to order code



### Order information

Order number	Length (mm)	Controller <sup>1)</sup>	
		steady mode	strobe mode
SAX4 2050	50	1 A	8 A <sup>2)</sup>
SAX4 2086	86	1 A	8 A
SAX4 2122	122	1 A	8 A <sup>2)</sup>
SAX4 2158	158	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX4 2194	194	1 A	8 A <sup>2)</sup>
SAX4 2230	230	3 A	24 A
SAX4 2266	266	3 A	24 A <sup>2)</sup>
SAX4 2302	302	3 A	24 A
SAX4 2338	338	3 A	24 A <sup>2)</sup>
SAX4 2374	374	3 A	24 A
SAX4 2410	410	3 A	24 A <sup>2)</sup>
SAX4 2446	446	3 A	24 A

<sup>1)</sup> See controller selection for details

<sup>2)</sup> Strobe mode operation with light colors white, blue, green, UV on request

<sup>3)</sup> For light colors white, blue, green and UV

### Color information

Replace "X" in order number by one character <sup>4)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>4)</sup> Example for red line light: SAH4 2050



## Line lights - square lines

Four front line lights, which are based on the single line light (SAX4 1XXX), are available in modules from 50 to 446 mm.

The aluminium housing allows for the adjustment of the angle of the lights.


So a custom adaption to applications is very easy.

Other rectangular combinations on request.

A diffuser for evenness of illumination is available optionally.



### Mechanical dimensions

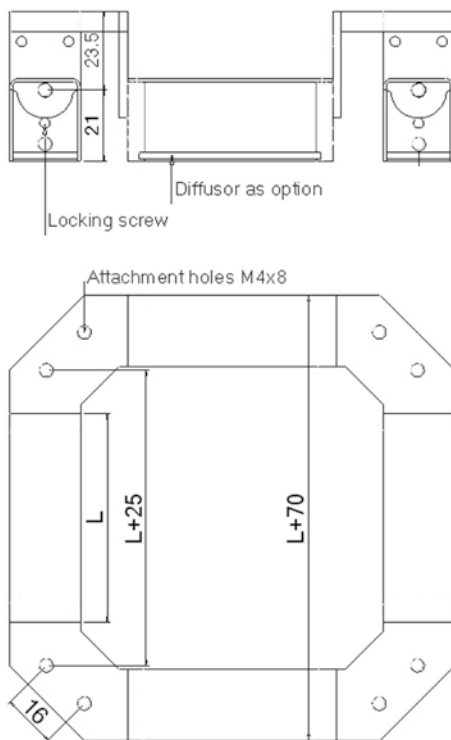

Step files available on request

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- Diffuser see "Order options"

### Order information

Order number	Length (mm)	Controller <sup>1)</sup>	
		steady mode	strobe mode
SAX4 4050	50	1 A	8 A <sup>2)</sup>
SAX4 4086	86	1 A 3 A <sup>3)</sup>	8 A 24 A <sup>3)</sup>
SAX4 4122 <sup>2)</sup>	122	3 A	24 A <sup>2)</sup>
SAX4 4158	158	3 A	24 A
SAX4 4194 <sup>2)</sup>	194	3 A	24 A <sup>2)</sup>
SAX4 4230	230	3 A	24 A
SAX4 4266 <sup>2)</sup>	266	3 A	24 A <sup>2)</sup>
SAX4 4302	302	3 A	24 A
SAX4 4338	338	on request	on request
SAX4 4374	374	on request	on request
SAX4 4410	410	on request	on request
SAX4 4446	446	on request	on request

<sup>1)</sup> See controller selection for details

<sup>2)</sup> Strobe mode operation with light colors white, blue, green, UV on request

<sup>3)</sup> For light colors white, blue, green and UV

### Color information

Replace "X" in order number by one character <sup>4)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>4)</sup> Example for red line light: SAH4 4050




**LATAB**  
Industrial LED Lighting

## Line lights with fresnel lens

This line light series is designed for line scan camera applications. It produces a very thin light beam of 4 mm width.

The standard working distance is 40 mm.  
The light lengths range from 58 to 788 mm. Custom lengths on request.

### Mechanical dimensions

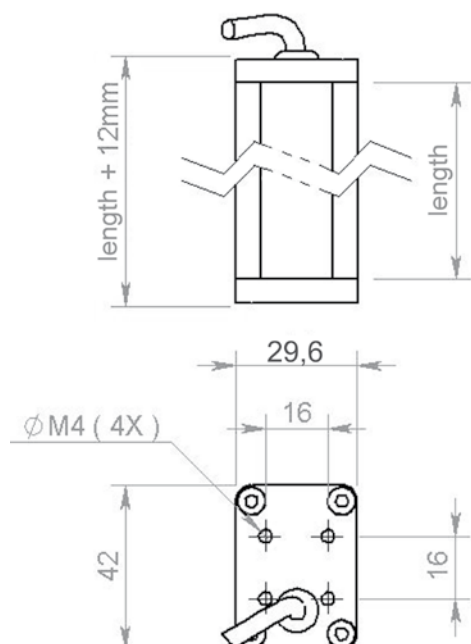

Step files available on request

### Color information

Replace "X" in order number by one character <sup>1)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>1)</sup> Example for red line light: SAH4 6058



### Order information

Order number	Length (mm)	Controller <sup>2)</sup>	
		steady mode	strobe mode
SAX4 6058	58 mm	1 A	8 A
SAX4 6097	97 mm	1 A	8 A
SAX4 6135	135 mm	1 A	8 A
SAX4 6173	173 mm	1 A	8 A
SAX4 6212	212 mm	1 A	8 A
SAX4 6250	250 mm	1 A	8 A
SAX4 6289	289 mm	1 A	8 A
SAX4 6327	327 mm	1 A	8 A
SAX4 6365	365 mm	1 A	8 A
SAX4 6404	404 mm	1 A	8 A
SAX4 6442	442 mm	1 A	8 A
SAX4 6481	481 mm	1 A	8 A
SAX4 6519	519 mm	3 A	24 A
SAX4 6557	557 mm	3 A	24 A
SAX4 6596	596 mm	3 A	24 A
SAX4 6634	634 mm	3 A	24 A
SAX4 6673	673 mm	3 A	24 A
SAX4 6711	711 mm	3 A	24 A
SAX4 6749	749 mm	3 A	24 A
SAX4 6788	788 mm	3 A	24 A

<sup>2)</sup> See controller selection for details

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"



# LATAB

Industrial LED Lighting

## Front/back lights

Due to its high intensive LEDs this light series can be used either as front light or as back light. For a front light application the diffuser is replaced by an acrylic clear glass cover.

Size options range from 51 x 48 to 207 x 516 mm.




## Order information

(for red and IR lights, other light colors on request)

mm	48	84	120	156	192	228	264	300	336	372	444	516
51	SA7 0601	SA7 0602	SA7 0603	SA7 0604	SA7 0605	SA7 0606	SA7 0607	SA7 0608	SA7 0609	SA7 0610	SA7 0612	SA7 0614
63	SA7 0801	SA7 0802	SA7 0803	SA7 0804	SA7 0805	SA7 0806	SA7 0807	SA7 0808	SA7 0809	SA7 0810	SA7 0812	SA7 0814
75	SA7 1001	SA7 1002	SA7 1003	SA7 1004	SA7 1005	SA7 1006	SA7 1007	SA7 1008	SA7 1009	SA7 1010	SA7 1012	SA7 1014
87	SA7 1201	SA7 1202	SA7 1203	SA7 1204	SA7 1205	SA7 1206	SA7 1207	SA7 1208	SA7 1209	SA7 1210	SA7 1212	SA7 1214
99	SA7 1401	SA7 1402	SA7 1403	SA7 1404	SA7 1405	SA7 1406	SA7 1407	SA7 1408	SA7 1409	SA7 1410	SA7 1412	SA7 1414
111	SA7 1601	SA7 1602	SA7 1603	SA7 1604	SA7 1605	SA7 1606	SA7 1607	SA7 1608	SA7 1609	SA7 1610	SA7 1612	SA7 1614
123	SA7 1801	SA7 1802	SA7 1803	SA7 1804	SA7 1805	SA7 1806	SA7 1807	SA7 1808	SA7 1809	SA7 1810	SA7 1812	SA7 1814
135	SA7 2001	SA7 2002	SA7 2003	SA7 2004	SA7 2005	SA7 2006	SA7 2007	SA7 2008	SA7 2009	SA7 2010	SA7 2012	SA7 2014
147	SA7 2201	SA7 2202	SA7 2203	SA7 2204	SA7 2205	SA7 2206	SA7 2207	SA7 2208	SA7 2209	SA7 2210	SA7 2212	SA7 2214
159	SA7 2401	SA7 2402	SA7 2403	SA7 2404	SA7 2405	SA7 2406	SA7 2407	SA7 2408	SA7 2409	SA7 2410	SA7 2412	SA7 2414
171	SA7 2601	SA7 2602	SA7 2603	SA7 2604	SA7 2605	SA7 2606	SA7 2607	SA7 2608	SA7 2609	SA7 2610	SA7 2612	SA7 2614
183	SA7 2801	SA7 2802	SA7 2803	SA7 2804	SA7 2805	SA7 2806	SA7 2807	SA7 2808	SA7 2809	SA7 2810	SA7 2812	SA7 2814
195	SA7 3001	SA7 3002	SA7 3003	SA7 3004	SA7 3005	SA7 3006	SA7 3007	SA7 3008	SA7 3009	SA7 3010	SA7 3012	on request
207	SA7 3201	SA7 3202	SA7 3203	SA7 3204	SA7 3205	SA7 3206	SA7 3207	SA7 3208	SA7 3209	SA7 3210	SA7 3212	on request

	Required controller:	1 A controller for continuous mode and 8 A controller for strobe mode, see "Controller selection"
	Required controller:	3 A controller for continuous mode and 24 A controller for strobe mode, see "Controller selection"
	Required controller:	Two 3 A controllers for continuous mode and two 24 A controllers for strobe mode, see "Controller selection"

## Mechanical dimensions

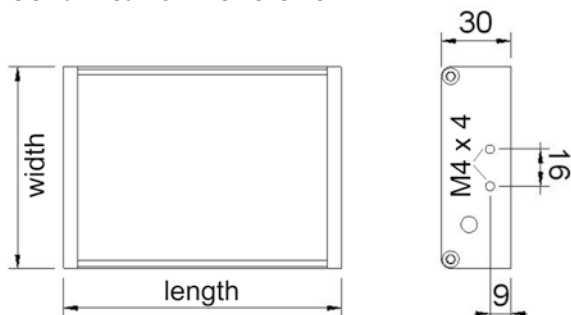

Step files available on request.

The table above states length (columns) and width (rows) of the outer dimension. The effective light area is reduced by 12 mm in length and 7 mm in width.

## Color information

Replace "X" in order number by one character <sup>1)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>1)</sup> Example for red back light: SAH7 0602

## Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- For front light applications add "C" (acrylic clear glass cover) to order code, i.e. SAH7 0602C





## Front lights 80 x 56 mm

This front light series with its multifunctional dimensions suits most applications.


A diffuser for evenness of illumination is available as an option.

The effective light area is 72 x 48 mm.

Four M4 screws serve for securing the lighting head or a bracket (SXX3 010213).



### Mechanical dimensions

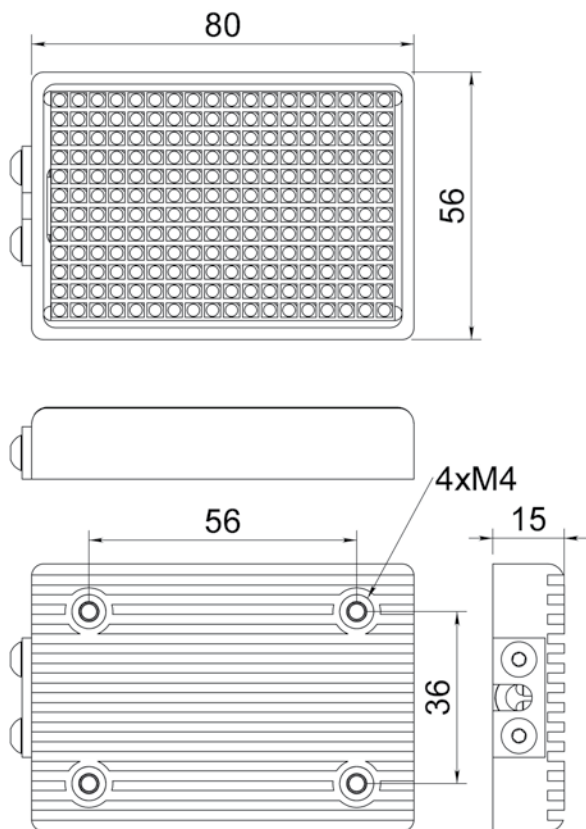

Step files available on request

### Order information

Order number	Color	Controller <sup>1)</sup>	
		steady mode	strobe mode
SAH5 1011	Red (617 nm)	1 A	8 A
SAW5 1011	White	1 A	8 A
SAR5 1011	IR (880 nm)	1 A	8 A
SAB5 1011	Blue (465 nm)	1 A	8 A
SAG5 1011	Green (520 nm)	1 A	8 A
SAU5 1011	UV (395 nm)	1 A	8 A

<sup>1)</sup> See controller selection for details

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"
- Diffuser see "Order options"






## Coaxial lights


Coaxial lights are used for sharp detection which requires a very even light over the whole area.  
The light is covered by a coated protective glass.  
Mounting: four M4 screws suited for LATAB brackets.



### Mechanical dimensions

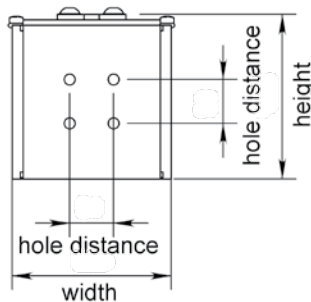

Different hole pattern for SAX9 0110 and SAX9 0145 (8 instead of 4 thread holes). Drawing on request.

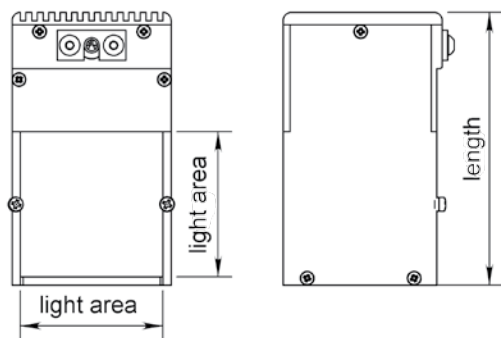

Step files available on request

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"

### Order information

Order number	Side length of active light area (mm)	Width (mm)	Height (mm)	Length (mm)	Mounting hole distance (mm)	Controller <sup>1)</sup>	
						steady mode	strobe mode
SAX9 2525	25	30.5	33	70	10	1 A	8 A
SAX9 5050	50	55.5	58	95	16	1 A	8 A
SAX9 7575	75	80.5	84	120	16	1 A 3 A <sup>2)</sup>	8 A 24 A <sup>2)</sup>
SAX9 0110	109	115	118	159	16	3 A	24 A
SAX9 0145	145	150	153	190	16	3 A <sup>3)</sup>	24 A <sup>3)</sup>

<sup>1)</sup> See controller selection for details

<sup>2)</sup> For light colors white, blue, green and UV

<sup>3)</sup> For light colors red and IR, others on request

### Color information

Replace "X" in order number by one character <sup>3)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R	IR	880 nm
B	Blue	465 nm
G	Green	520 nm
U	UV	395 nm

<sup>3)</sup> Example for red coaxial light: SAH9 2525




## Spot lights

### SAX-spot light with 7 mm diameter

The small spot light is based on one S-LED. It is designed especially for lighting small areas. Option: Multi-light head applications are available with up to 10 spots using one controller.



#### Mechanical dimensions SAX-spot light

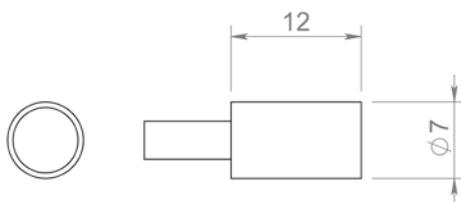

Step files available on request

#### Order information (for both types)

Order number	Sizes (mm)		Controller <sup>1)</sup>	
	outer Ø	height	steady mode	strobe mode
SAX3 7007	7	12	1 A	8 A
OSX3 7016	16	25	1 A	8 A

<sup>1)</sup> See controller selection for details

#### Options (for both types)


- Cable length and type see "Order options"

### OSX-spot light with 16 mm diameter

The small spot light contains four high-power O-LEDs. It is designed especially for lighting small areas. Option: Multi-light head applications are available with up to four spots using one controller.



#### Mechanical dimensions OSX-spot light

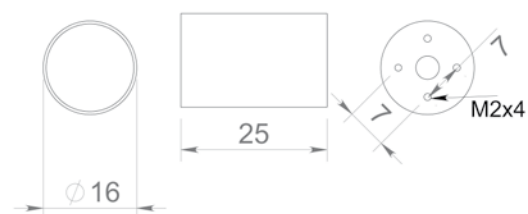

Step files available on request

#### Color information (for both types)

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
H	Red	617 nm
W	White	
R <sup>3)</sup>	IR	880 nm
B	Blue	465 nm
G	Green	520 nm

<sup>2)</sup> Example for red spot light: SAH3 7007

<sup>3)</sup> Only for SAX3 7007




## High-brightness spot lights

The spot light with secondary LED optics is based on an Oslon SSL80 LED. Different lenses enable illumination fields with different diameters.

The lighting head can be equipped with lenses for light beam angles of 10, 18, 28 and 40 degrees for an ideal adjustment to different working distances and illumination fields.



### Mechanical dimensions

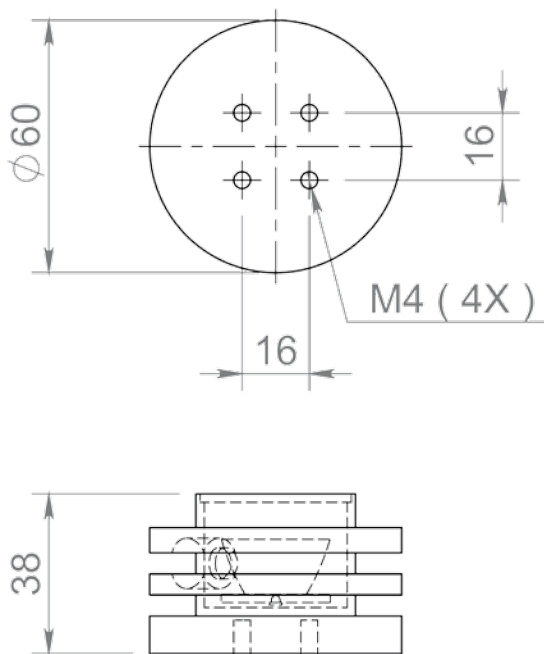

Step files available on request

### Order information

Order number	Secondary optics	Controller <sup>1)</sup>	
		steady mode	strobe mode
FAX3 1151(10)	10°	1 A	8 A
FAX3 1151(18)	18°	1 A	8 A
FAX3 1151(28)	28°	1 A	8 A
FAX3 1151(40)	40°	1 A	8 A

<sup>1)</sup> See controller selection for details

### Color information

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
D	Red	617 nm
W	White	
B	Blue	465 nm
G	Green	520 nm

<sup>2)</sup> Example for red spot light: FAX3 1151(10)

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"




## High-brightness ring lights

These ring lights are equipped with 12 high-power LEDs permitting working distances of 1 to 1.5 m in practice, much more than standard LED lights which are usually suitable for working distances of up to 30 cm.

The lighting head can be equipped with lenses for light beam angles of 10, 18, 28 and 40 degrees for an ideal adjustment to different working distances and fields of views.

A bracket and a clear glass diffuser is included. It's possible to choose a shower glass diffuser.

### Mechanical dimensions

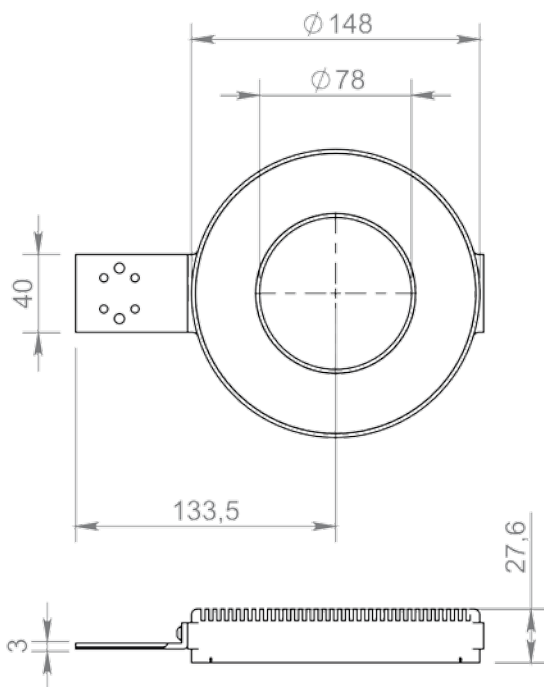

Step files available on request



### Order information

Order number	Secondary optics	Controller <sup>1)</sup>	
		steady mode	strobe mode
FAX3 1153(10)	10°	1 A	8 A
FAX3 1153(18)	18°	1 A	8 A
FAX3 1153(28)	28°	1 A	8 A
FAX3 1153(40)	40°	1 A	8 A

<sup>1)</sup> See controller selection for details

### Color information

Replace "X" in order number by one character <sup>2)</sup>	Color	Wavelength
D	Red	617 nm
W	White	
B	Blue	465 nm
G	Green	520 nm

<sup>2)</sup> Example for red ring light: FAX3 1153(10)

### Options

- Cable length and type see "Order options"
- Bracket options see "Lighting head brackets"




## High-brightness rectangular lights

These rectangular lights are equipped with 12 high-power LEDs and a reflector to focus the light on a rectangular field of illumination. They are especially suitable for pallet lighting.

Fastening holes are integrated in the cooling profile (no bracket included).



### Mechanical dimensions

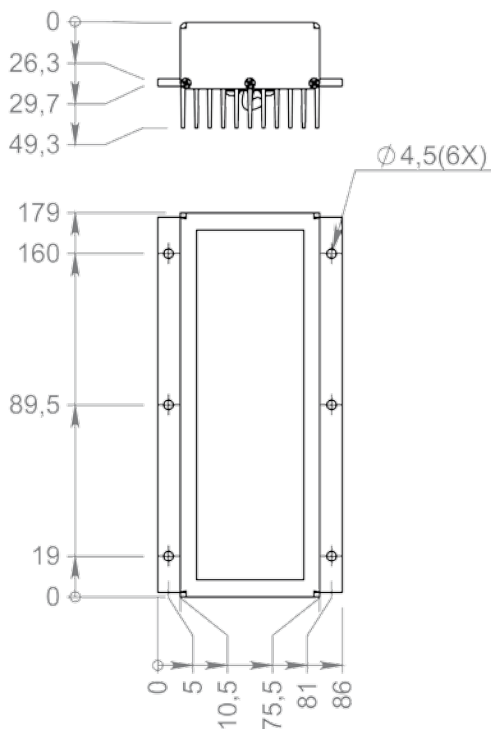

Step files available on request

### Order information

Order number	Color	Controller <sup>1)</sup>	
		steady mode	strobe mode
OSD5 0101	Red (617 nm)	3 A	24 A
OSW5 0101	White	3 A	24 A
OSB5 0101	Blue (465 nm)	3 A	24 A
OSG5 0101	Green (520 nm)	3 A	24 A

<sup>1)</sup> See controller selection for details

### Options

- Cable length and type see "Order options"





## Control units

### General information

Reliable controllers are a precondition for efficient LED lighting. That's why LATAB has developed an extensive range of its own controllers. These not only maximize the life time of the sensitive LEDs, but automatically adapt to the connected light head.

The product features of the LATAB controllers are numerous: designs suitable for industrial use, adjustable light intensity, up to 4 channels, PC operation via Ethernet or other interfaces, as well as stand-alone solutions, either for continuous mode operation or strobe mode, with adjustable pulse durations from 50 µs to 1.5 ms.

The controllers are based on constant current generators with a "plug and play" feature that automatically adapts to the connected LED light for exact light intensity.

The major differentiating factor of LATAB controllers is the illumination technique:

### Continuous mode

The adjustable parameter for continuous mode controllers is light intensity.

Continuous mode controllers are equipped with the "long flash" feature: The long flash function is a kind of trigger-controlled light. Light starts with trigger pulse and lasts as long as the trigger pulse is on.

In the long flash mode double intensity is available, that means that light intensity is twice the standard intensity. In double intensity (DI) mode ON-time is limited to five seconds, followed automatically by five seconds OFF-time. Shorter ON-time double intensity pulses are not limited and can be repeated at users demand.

Rise time is about 1.5 msec and fall time about 10 to 15 msec.

### Strobe mode

The adjustable parameters for strobe controllers are light intensity and strobe pulse length.

For PC-controlled units also a trigger pulse delay is available.

Strobe controllers provide 5 times more intensity compared to continuous devices.

In strobe mode the pulse length is tuneable by internal set time from 50 to 1500 µsec.

Rise and fall time is a few µsec.

A second differentiating factor of LATAB controllers is the interface:

### Ethernet interface

These controllers communicate by Ethernet protocol. In principle this allows an unlimited number of units to be connected to the same computer. When using the test program the number is limited to 8 controllers.

The trigger signal is connected to the controller by a separate connector.

### RS-232 interface

The RS-232 interface is converted (within the COM-port connector itself) to RS-485, enabling up to 16 units to be connected to the same COM-port in a so-called multi drop system. These units are delivered with a test/demo PC-software which can also be used in real applications.

### Stand alone operation

In the stand alone mode the controller operates without an external computer. Light is adjusted by either an internal or an external potentiometer. Intensity can also be modulated by the voltage from zero (0 V) to full brightness (10 V).


### Test program

The PC-control unit is delivered with a test program for testing purposes and lab applications.


The protocol has a simple form and is therefore easily programmable by the user.

## Controller selection

### Continuous mode

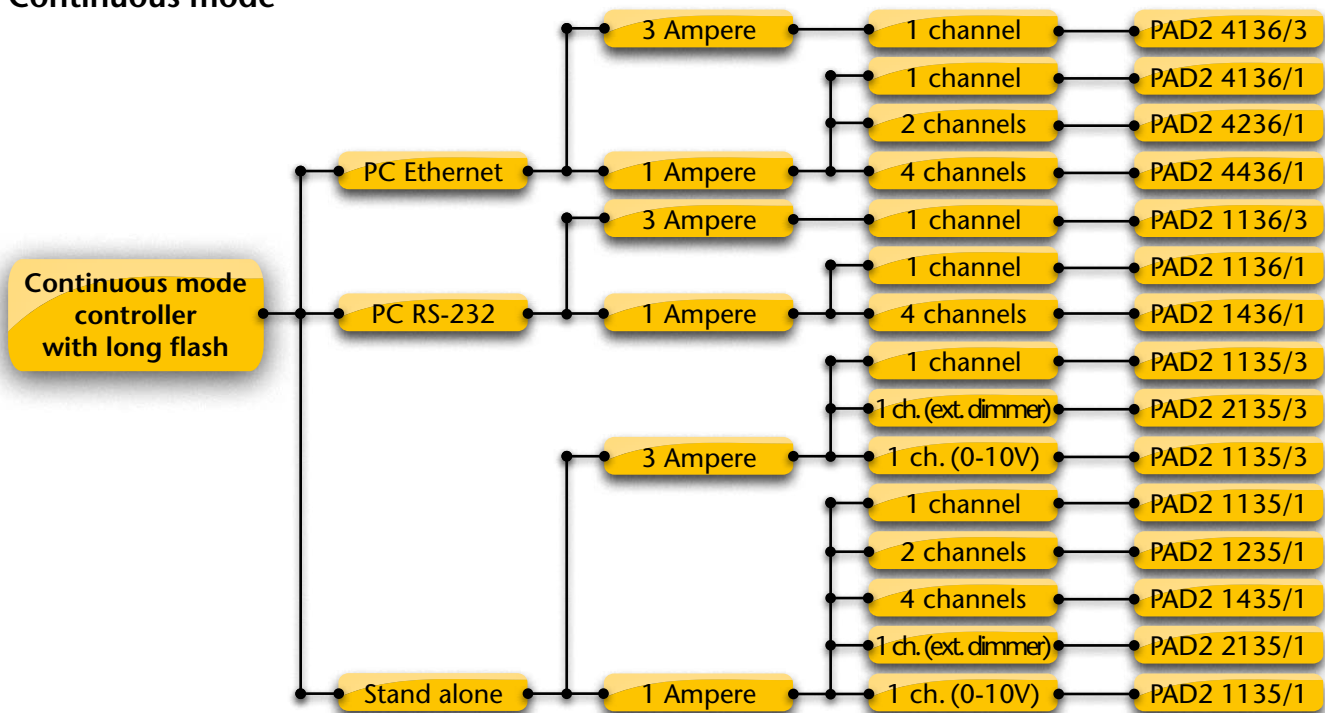

### Strobe mode

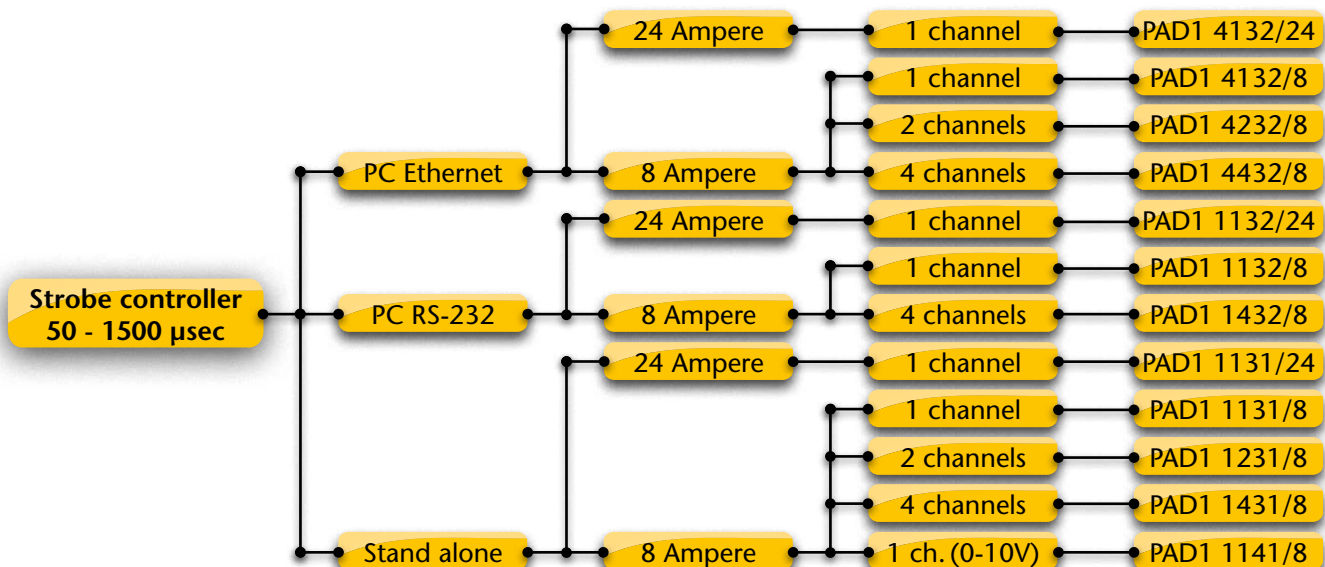



## Continuous mode controllers

The continuous mode controllers are microprocessor-based and specially designed to control all types of LATAB lighting heads. Like the lighting heads, they come in a black aluminium housing.

The controller is enabled for plug and play. Just connect the LATAB lighting head and the controller automatically identifies the lighting type by an electronic sensor and gives the maximum light intensity to the lighting head.

The light intensity can be adjusted by a dimmer inside the controller.

The unique "long flash" feature gives the opportunity to increase the light intensity up to 200% when a trigger pulse is received. In order to avoid overheating the pulse length is limited to 5 sec, followed by a 5 sec cool down period.

The controllers are supplied with a 5 m power/trigger cable <sup>1)</sup>.

### General specifications

Supply voltage	24 V DC $\pm$ 10 %, max. 2.5 A
Power output	max. 1 A/3 A
Light intensity	0 - 100 % internal potentiometer
Trigger input	5 - 24 V, optically isolated
Operation temperature	0 - 65 °C



Sample picture. Specific type pictures and drawings on the following pages.

### Order information

Order number	Intensity control mode	Output	Number of channels	Figure number	Long flash option (5 sec)
PAD2 1135/1	Internal potentiometer / 0-10 V <sup>2)</sup>	1 A	1	1	yes
PAD2 1135/3	Internal potentiometer / 0-10 V <sup>2)</sup>	3 A	1	1	yes
PAD2 2135/1	External dimmer / 0-10 V <sup>2)</sup>	1 A	1	9	
PAD2 2135/3	External dimmer / 0-10 V <sup>2)</sup>	3 A	1	9	
PAD2 1235/1	Internal potentiometer	1 A/chan.	2	3	yes
PAD2 1435/1 <sup>3)</sup>	Internal potentiometer	1 A/chan.	4	4	yes
PAD2 1136/1	RS-232	1 A	1	1	
PAD2 1136/3	RS-232	3 A	1	1	
PAD2 1436/1 <sup>4)</sup>	RS-232	1 A	4	10	
PAD2 4136/1	Ethernet	1 A	1	5	yes
PAD2 4136/3	Ethernet	3 A	1	6	yes
PAD2 4236/1	Ethernet	1 A	2	7	yes
PAD2 4436/1 <sup>3)</sup>	Ethernet	1 A	4	8	yes

<sup>1)</sup> Not valid for 4-channel controllers

<sup>2)</sup> Additional cable LKA2 5135 is necessary

<sup>3)</sup> Trigger cable is optional

<sup>4)</sup> PAD2 1436/1 has no trigger function



## Strobe mode controllers

The strobe mode controllers are microprocessor-based and specially designed to control all types of LATAB lighting heads. Like the lighting heads, they come in a black aluminium housing.

The controller is enabled for plug and play. Just connect the LATAB lighting head and the controller automatically identifies the lighting type by an electronic sensor and gives the maximum light intensity to the lighting head.

The strobe pulse is adjustable in 16 steps. The light intensity can also be adjusted. Increasing the light intensity up to 200% at 50 and 100 µsec strobes can be selected by internal jumper.

The controllers are supplied with a 5 m power/trigger cable.

### General specifications

Supply voltage	24 V DC $\pm$ 10%, max. 2.5 A
Power output	max. 8 A/24 A
Light intensity	0 - 100% internal potentiometer
Strobe pulse	50 - 1500 µsec in 16 steps
Trigger input	5 - 24 V, optically isolated
Trigger frequency	max. 200 Hz
Operation temperature	0 - 65 °C



Sample picture. Specific type pictures and drawings on the following pages.


### Order information

Order number	Intensity control mode	Output	Number of channels	Figure number	Trigger delay (0 - 48 msec)
PAD1 1131/8	Internal potentiometer	8 A	1	1	
PAD1 1131/24	Potentiometer	24 A	1	2	
PAD1 1141/8	0 - 10 V	8 A	1	1	
PAD1 1231/8	Internal potentiometer	8 A/chan.	2	3	
PAD1 1431/8	Internal potentiometer	8 A/chan.	4	4	
PAD1 1132/8	RS-232	8 A	1	1	yes
PAD1 1132/24	RS-232	24 A	1	2	yes
PAD1 1432/8	RS-232	8 A/chan.	4	4	yes
PAD1 4132/8	Ethernet	8 A	1	5	yes
PAD1 4132/24	Ethernet	24 A	1	6	yes
PAD1 4232/8	Ethernet	8 A/chan.	2	7	yes
PAD1 4432/8	Ethernet	8 A/chan.	4	8	yes

## Controller figures


**Figure 1**

PAD2 1135/1 · PAD2 1135/3 · PAD2 1136/1  
 PAD2 1136/3 · PAD1 1131/8 · PAD1 1141/8  
 PAD1 1132/8

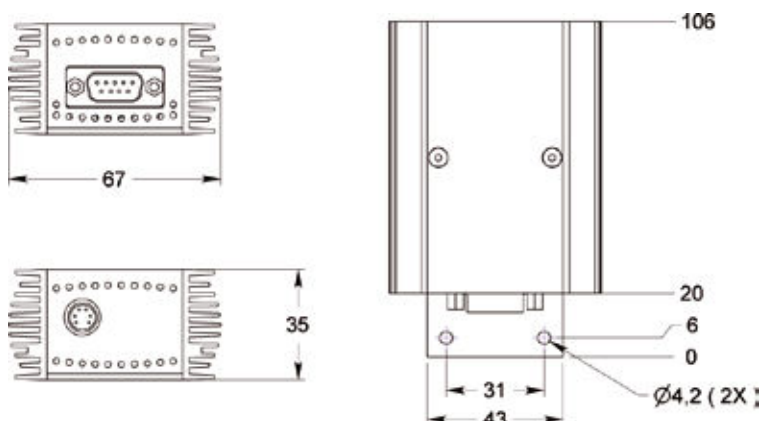


**Figure 2**

PAD1 1131/24 · PAD1 1132/24

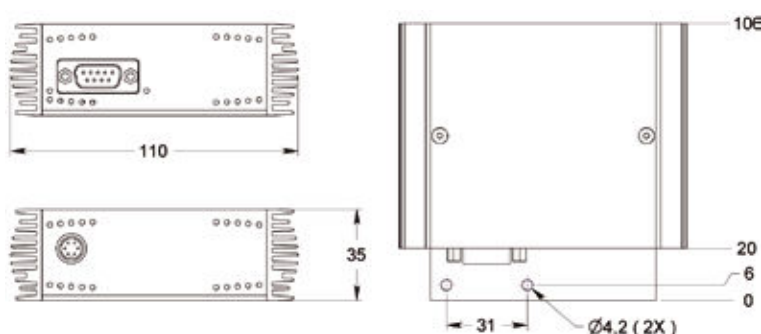

**Figure 3**

PAD2 1235/1 · PAD1 1231/8

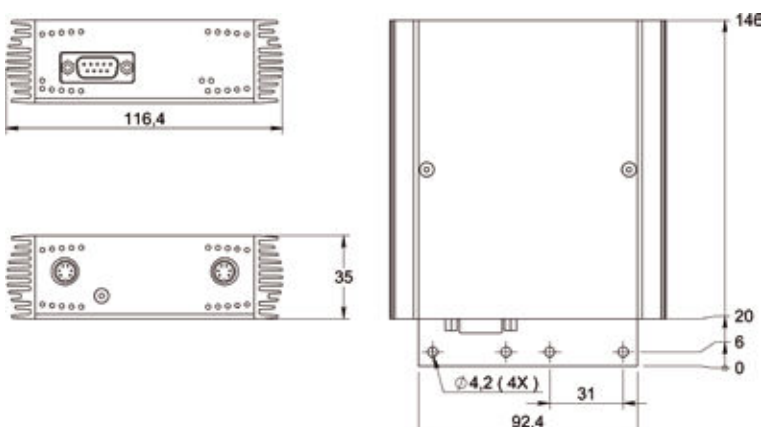







**Figure 4**

PAD2 1435/1 · PAD1 1431/8 · PAD1 1432/8

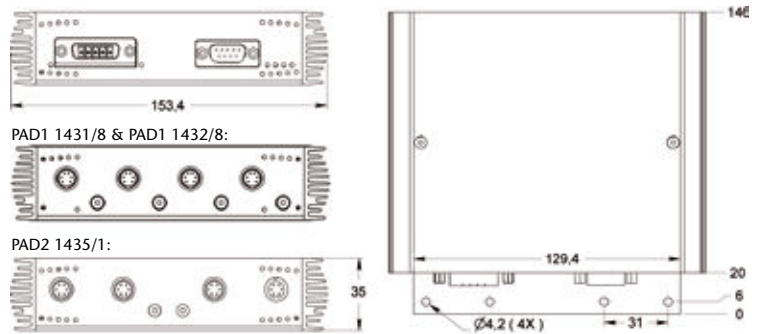


**Figure 5**

PAD2 4136/1 · PAD1 4132/8

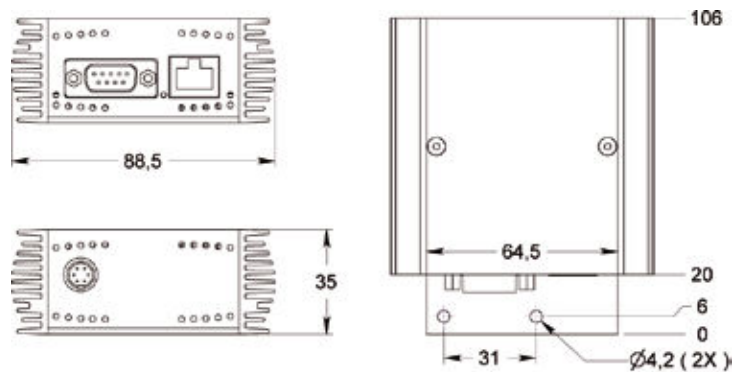


**Figure 6**

PAD2 4136/3 · PAD1 4132/24

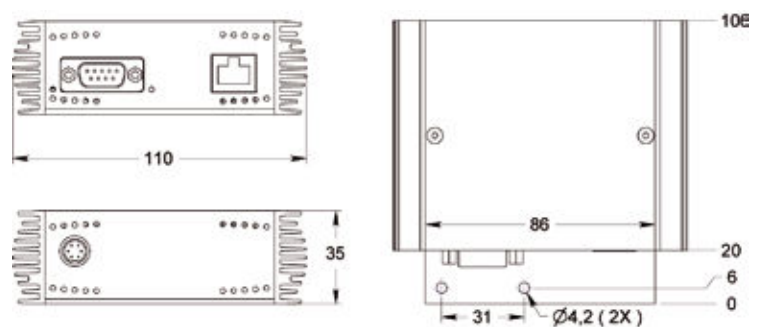

**Figure 7**


PAD2 4236/1 · PAD1 4232/8

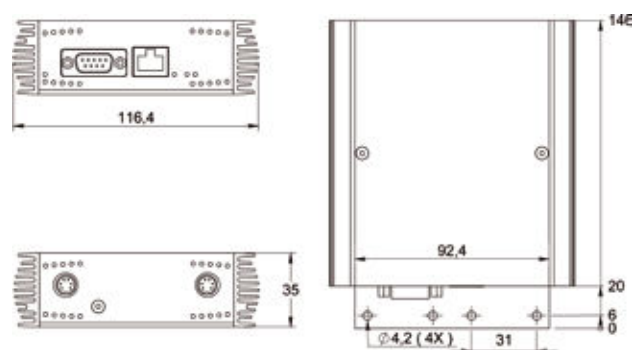




**Figure 8**

PAD2 4436/1 · PAD1 4432/8

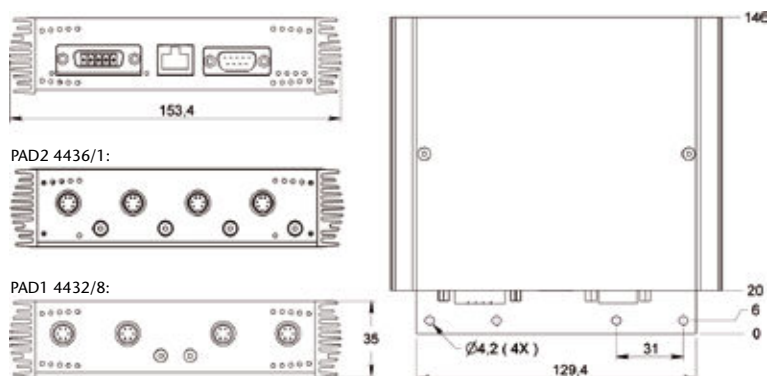


**Figure 9**

PAD2 2135/1 · PAD2 2135/3

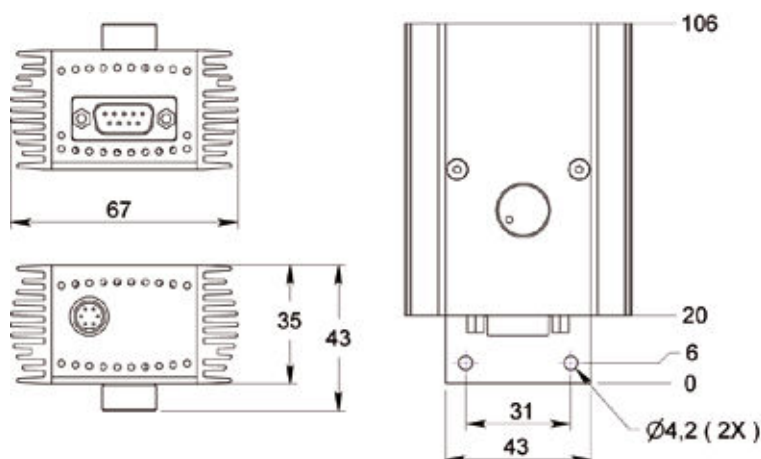

**Figure 10**

PAD2 1436/1

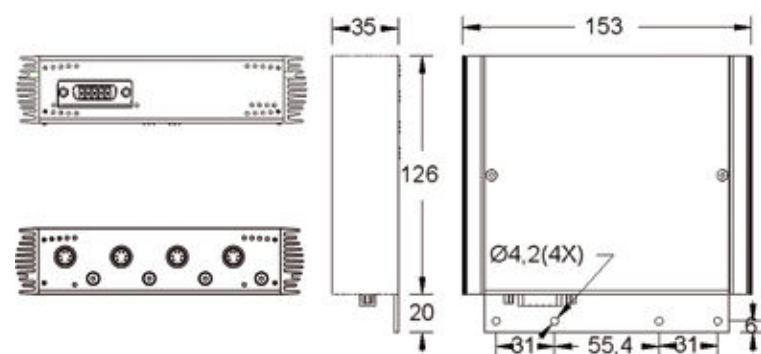

Step files for all controllers available on request




## Demo controller/ laboratory tester



The Demo controller/lab tester comes with plug & play functionality. All adjustments can be made from the front panel. It can be operated in both continuous (normal as well as external on/off control) and strobe mode (internal or external trigger).  
Trigger frequency: adjustable internal generator from 1 - 50 Hz or external up to 200 Hz.  
Light intensity range:  
0 - 100% @ strobe time 0.005 - 1.5 msec  
0 - 200% @ strobe time max 100 µsec.

### Mechanical dimensions

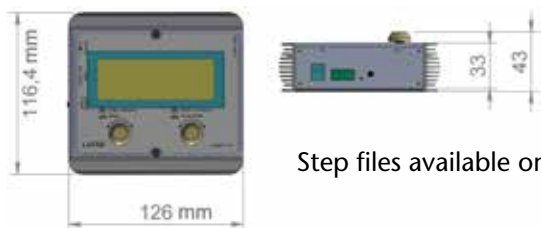

Step files available on request

### General specifications

Supply voltage	24 V DC $\pm$ 5%, max. 2.5 A
Continuous mode	Adjustable brightness, max. 3 A, fine adjustment by control knob 0 - 100%
Strobe mode	Adjustable brightness, max. 24 A, strobe time from 0.005 - 1.5 msec, trigger frequency 0 - 200 Hz
Operation temp.	0 - 65 °C


Order number
PAD8 1112

## Inline controller



For applications not requiring the features of the PAD1 and PAD2 controllers, the 24 V DC option is available. An inline controller housed in a small aluminium tube as part of the light head cable enables the light head to be directly connected to the 24 V DC power supply. This option allows only continuous mode at 100% light intensity and is available for light heads specified for 1 A max.

### Mechanical dimensions

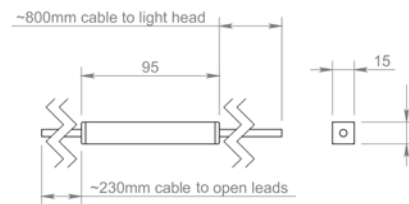

Step files  
available  
on request

### General specifications

Supply voltage	24 V DC, 1 A
Light head drive current	max. 1 A
Light intensity	100%, not adjustable
Cable connections (robot cable option)	
Red & orange (white & yellow)	+ 24 V DC
Black & brown (green & brown)	0 V

### Order information

Order number extension to lighting head
/INL24V

### Options

- Cable length & type (i.e. robot cable) on request



# LATAB

Industrial LED Lighting

## Demo / laboratory lighting kit

Different environmental conditions for machine vision applications can often make the choice of suitable lighting difficult. That's why in many cases different lighting applications have to be tested for the ideal solution.

The different lights are controlled by the demo controller/laboratory tester with all possible functions of the LATAB controllers.

The demo / laboratory lighting kit comes in a suitcase.



### Mechanical dimensions

Suitcase: 515 x 430 x 180 mm

Lighting heads and controller: see product pages

### Contents

Product	Dimensions (mm)	Available light colors	Order number
Demo controller/ laboratory tester			PAD8 1112
Ring light	outer Ø 102	Red / White	SAX3 1102
Dome light	outer Ø 102	Red / White	SAX3 2102
Dark field	outer Ø 103	Red / White	SAX3 4103
Line lights - two lines	length 122	Red / White	SAX4 2122
Front light	56 x 80 x 15	Red / White	SAX5 1011
Back light	63 x 84 x 30	Red / White	SAX7 0802
Coaxial light	25 x 25	Red / White	SAX9 2525
AC/DC converter			

Other combinations on request.

### General specifications

Supply voltage	24 V DC $\pm$ 5%, max. 1 A
Continuous mode	Brightness adjustable, max. 1 A, fine adjustment by potentiometer, 200% more light intensity with long flash mode at 50% on/off at max. 5 sec
Strobe mode	Brightness adjustable, max. 8 A, strobe time from 0.005 - 1.5 msec in 16 steps, trigger frequency 1 - 50 Hz
Operation temperature	0 - 65 °C

### Order information

Order number	Light color	Wavelength
SAH8 6110	Red	617 nm
SAW8 6110	White	





## Order options

### Cable options for lighting heads

LATAB lighting heads are supplied with a 1 m cable by default.

For different lengths and types of cables please select the order code extension from the table below.

### Extension cables for lighting heads

Extension cables between lighting head connector and controller are available for continuous and strobe mode controllers. Please select the cable length and type from the table below.

### Diffuser

For a particularly homogeneous lighting there are diffusers available for the line light families and the front light 80 x 56 mm.

Ring lights and back lights have a diffuser included as standard.

### Polarization filters

For ring lights with 78 and 102 mm diameter there are polarization filters available. For details please see page 35.

### Custom light beam angle

For dark field and ring lights the light beam angle can be adapted to customer needs. See also page 5.

### Lighting head brackets

There are different brackets available. For details please see page 34.

### DIN clips for controllers

For a controller mounting on DIN rails there are DIN clips available for all control units. Two clips are mounted on the controller back side. For assembling just push the controller with the clips on the rail. Please select the option from the table below.

## Order information

Order option	Specified	Order code	Example
Cable options for lighting heads	different lengths	add "/XX" behind light head order number	SAH3 1078/5 for 5 m cable or SAH3 1078/05 for 0.5 m cable
Cable options for lighting heads	various flexibility	add "/R" behind light head order number	SAH3 1078/R for flexible 1 m cable or SAH3 1078/R3 for flexible 3 m cable
Extension cables for lighting heads	for continuous mode controllers	LKP1 XXXX	LKP1 4000 for 4 m extension cable (continuous mode)
Extension cables for lighting heads	for strobe mode controllers	LKS1 XXXX	LKS1 4000 for 4 m extension cable (strobe mode)
Diffuser	for line lights and front light 80 x 56 mm	add "/S" behind light head order number	SAH4 1050/S
Polarization filter	see page 31		
Custom light beam angle for dark field lights	degrees of beam angle, 80° is standard, adjustable from 70° - 90°	add "/(XX)" behind light head order number	SAX3 4072/(85) for 85° light beam angle
Custom light beam angle for ring lights	degrees of beam angle, 12° is standard, adjustable from 0° - 40°	add "/(XX)" behind light head order number	SAX3 1078/(05) for 5° light beam angle
Lighting head brackets	see page 30		
DIN clips for controllers	two clips on back side	add "/D" behind controller order number	PAD1 1131/8/D





# LATAB


Industrial LED Lighting

## Lighting head brackets


Alternative brackets with different dimensions are available to fit the LATAB lighting heads to special requirements. Step files are available on request.

### Mechanical dimensions


Universal, angle for S-series (SXX3 010213)

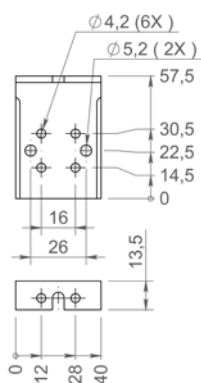


Universal, straight for S-series dark field (LAD3 4011)

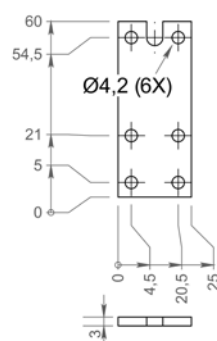


Universal, straight (LAD3 6114)

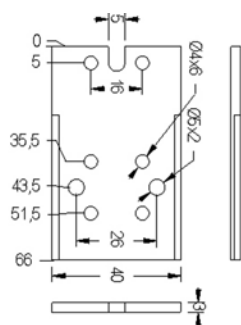


Universal, angle (LAD3 7217)

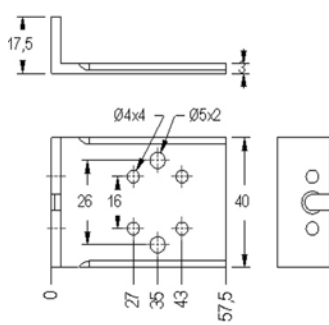


Round for Montech (LDF6 1011)

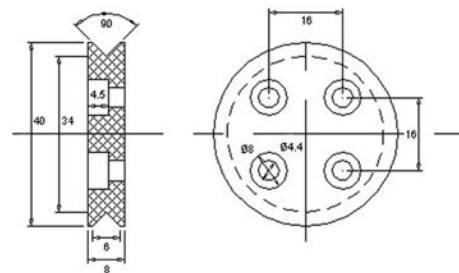

Adjustable, straight (LDF6 1023)

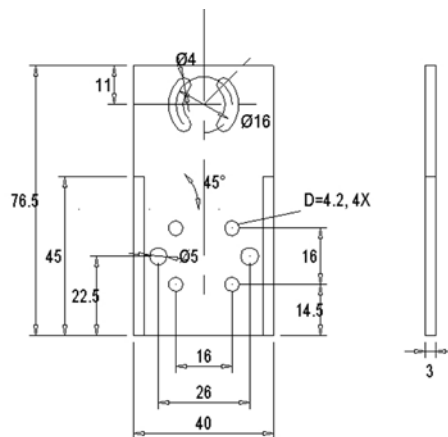

Adjustable, angle (LDF6 1022)

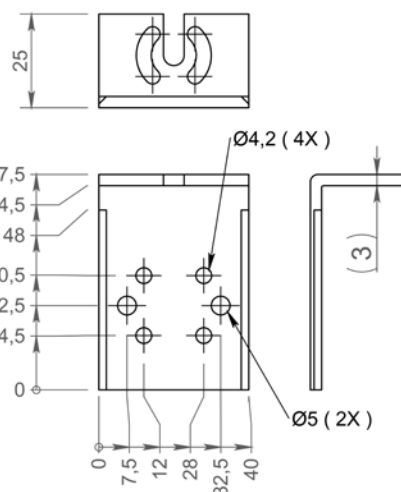

### Order information

Order number	Design
SXX3 010213	Universal, angle for S-series only
LAD3 4011	Universal, straight for dark field of S-series only
LAD2 6114	Universal, straight, for P-series and SXX4, SXX7, SXX9-series
LAD3 7217	Universal, angle, for P-series and SXX4, SXX7, SXX9-series
LDF6 1011	Round for Montech, for P-series and SXX4, SXX7, SXX9-series
LDF6 1023	Adjustable, straight, for P-series and SXX4, SXX7, SXX9-series
LDF6 1022	Adjustable, angle, for P-series and SXX4, SXX7, SXX9-series

Other types and custom designs on request.



## Polarization filters for ring lights

There are polarization filters for ring lights with 78 and 102 mm diameter available.

The filter consists of two parts: an outer part for the ring light and an inner part for the camera. The outer section is fixed by three screws. The inner section is twistable in order to adjust the polarization effect.


The most used polarization filter is HN38 with a total luminous transmittance of approximately 38% and it's noted for the lack of color distortion.

The filter ring is made of black aluminium.  
Other types of polarization filters on request.




### Mechanical dimensions

#### LFL3 1078

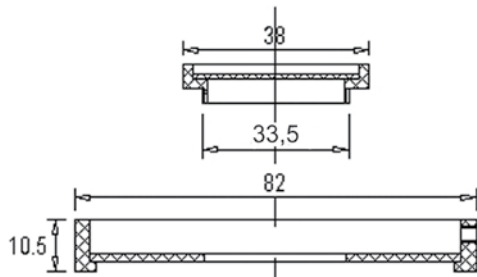

#### LFL3 1102

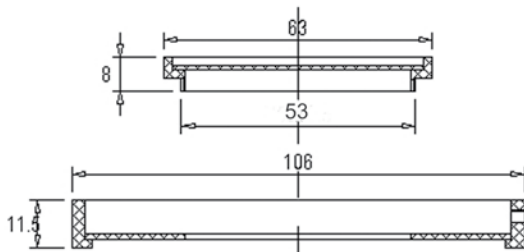

### Order information

Order number	Design
LFL3 1078	polarization filter for SAX3 1078
LFL3 1102	polarization filter for SAX3 1102


Other types and custom designs on request.

## Customer-specific engineering


Customer-specific developments and adaptations are a core part of LATAB's business at near standard prices of course, and with short project lead times. You name it, we'll make it!

Design skills:


- CAD engineering
- Electronics development
- Thermal management

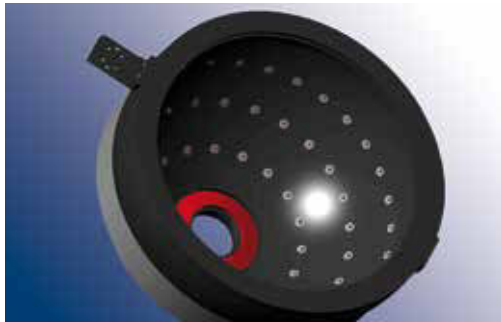

Customer-specific dome light with integrated ring light in top section and three LED rings in dome

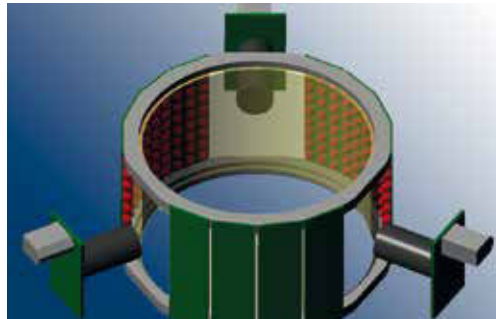

Customer-specific circular back light with 3 camera holes

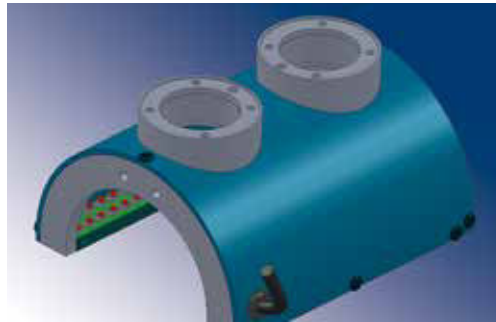

Customer-specific tunnel light with light colors red and UV

## General LED lighting

In addition to LED lighting for the machine vision market, LATAB also offers general lighting solutions.

Examples include decorative lighting and object illumination, both indoors and out, using light modules based on high brightness or ultra-bright LEDs. LATAB's extensive experience in meeting the requirements of industrial applications paired with many years of design skills are the key to its successful LED engineering.



Intelligent interior illumination



### International Sales Contact:

E-Mail [sales@latab.de](mailto:sales@latab.de)  
Phone +49 (0) 7243 604-1800  
Fax +49 (0) 7243 69944

Picture credits:  
Title page: Diego Cervo, dreamstime.com

LAT elektronik AB (Sweden)  
Krossgatan 18  
SE-162 50 Vällingby  
Tel. +46 (0) 8704 9225  
Fax +46 (0) 8564 32006  
[info@latab.se](mailto:info@latab.se)

International Sales:  
Polytec GmbH (Germany)  
Polytec-Platz 1-7  
D-76337 Waldbronn  
Tel. + 49 (0) 7243 604-0  
Fax + 49 (0) 7243 69944  
[sales@latab.de](mailto:sales@latab.de)

[www.latab.net](http://www.latab.net)